



2

9

4 10

4

12,13

5

6

3

7

8


FIRE BRICK INSTALLATION SEQUENCE - WESTFIRE UNIQ 23

Vermiculite brick set for the Uniq 23 freestanding and Uniq 23 inset stove





- 1 Inner Top Turbulence Brick 2 – Left Mid Baffle Brick
- 3 Right Mid Baffle Brick
- 4 Rear Brick
- 5 Left Base Brick
- 6 Left Side Brick
- 7 Right Base Brick
- 8 Right Side Brick
- 9 Outer Top Baffle Brick
- 10 Rear Base Brick
- 11 Front Base Brick
- 12 Grate Support
- 13 Grate
- 14 Log Retainer

Installation procedure:

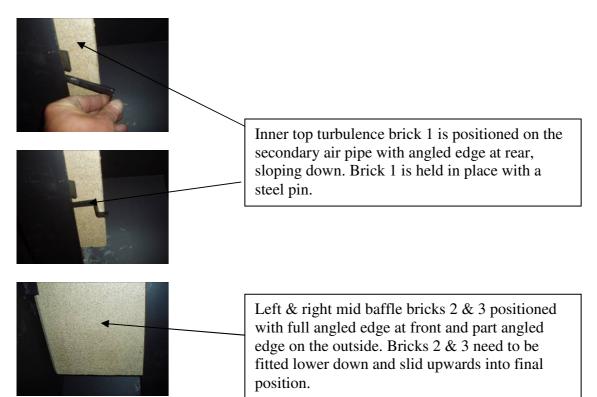

FIRE BRICK INSTALLATION SEQUENCE - WESTFIRE UNIQ 23

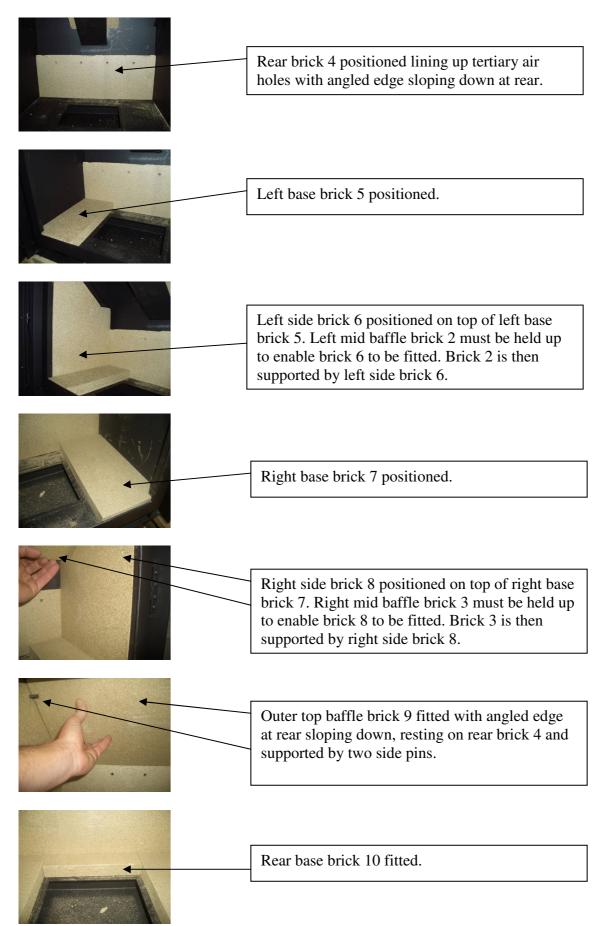

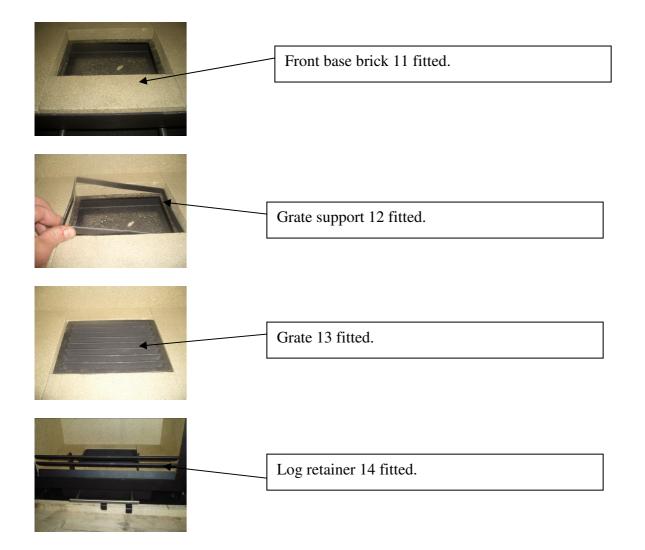

Eurostove Limited, Unit S5, Mendip Industrial Estate, Mendip Road, Rooksbridge, Axbridge, Somerset. BS26 2UG t: 01934 750500 f: 01173 156207 e: info@eurostove.co.uk ww.eurostove.co.uk